

D6 RS485 - RJ45 - (NET)

INSTALLATION GUIDE

COPYRIGHT

Electrex is a trademark of Akse S.r.l. All rights reserved.

It is forbidden to duplicate, adapt, transcript this document without Akse written authorization, except when regulated accordingly by the Copyright Laws.

WARRANTY

This product is covered by a warranty against material and manufacturing defects for a 24 months period from the manufacturing date.

The warranty does not cover the defects that are due to:

- Negligent and improper use
- Failures caused by atmospheric hazards
- Acts of vandalism
- Wear out of materials
- Firmware upgrades

Akse reserves the right, at its discretion, to repair or substitute the faulty products

The warranty is not applicable to the products that will result defective in consequence of a negligent and improper use or an operating procedure not contemplated in this manual.

RETURN AND REPAIR FORMALITIES

Akse accepts the return of instruments for repair only when authorized in advance. The transport costs are at customer charge.

RE-SHIPING OF REPAIRED PRODUCT

The terms for re-shipment of repaired products are ex-works, i.e. the transport costs are at customer charge.

Products returned as defective but found to be perfectly working by our laboratories, will be charged a flat fee to account for checking and testing time irrespective of the warranty terms.

SAFETY

This instrument was manufactured and tested in compliance with IEC 61010-1 CAT III - 300V class 2 standards for operating voltages up to 300 VAC rms phase to neutral.

In order to maintain this condition and to ensure safe operation, the user must comply with the indications and markings contained in the following instructions:

- When the instrument is received, before starting its installation, check that it is intact and no damage occurred during transport.
- Before mounting, ensure that the instrument operating voltages and the mains voltage are compatible then proceed with the installation.
- The instrument power supply needs no earth connection.
- The instrument is not equipped with a power supply fuse; a suitable external protection fuse must be foreseen by the contractor.
- Maintenance and/or repair must be carried out only by qualified, authorized personnel
- If there is ever the suspicion that safe operation is no longer possible, the instrument must be taken out of service and precautions taken against its accidental use.

Operation is no longer safe when:

- There is clearly visible damaged.
- The instrument no longer functions.
- After lengthy storage in unfavorable conditions.
- After serious damage occurred during transport

The instruments must be installed in respect of all the local regulations.

OPERATOR SAFETY

Warning: Failure to observe the following instructions may lead to a serious danger of death.

- During normal operation dangerous voltages can occur on instrument terminals and on voltage and current transformers. Energized voltage and current transformers may generate lethal voltages. Follow carefully the standard safety precautions while carrying out any installation or service operation.
- The terminals of the instrument must not be accessible by the user after the installation. The user should only be allowed to access the instrument front panel where the display is located.
- Do not use the digital outputs for protection functions nor for power limitation functions. The instrument is suitable only for secondary protection functions.
- The instrument must be protected by a breaking device capable of interrupting both the power supply and the measurement terminals. It must be easily reachable by the operator and well identified as instrument cut-off device.
- The instrument and its connections must be carefully protected against short-circuit.

Precautions: Failure to respect the following instructions may irreversibly damage to the instrument.

- The outputs and the options operate at low voltage level; they cannot be powered by any unspecified external voltage.
- The application of currents not compatible with the current inputs levels will damage to the instrument.

Further documentation may be downloaded from our web site www.electrex.it.

This document is owned by company AKSE that reserves all rights.

DECLARATION OF CONFORMITY

Akse hereby declares that its range of products complies with the following directives EMC 2014/30/EU, 2014/35/EU and complies with the following product's standard CEI EN 61326 - Ed. 2.0 (2012) - IEC 61326 - Ed. 2.0 (2012) CEI EN 61010 Ed. 3 (2010) - IEC 61010 Ed. 3 (2010). The product has been tested in the typical wiring configuration and with peripherals conforming to the EMC directive and the LV directive.

READINGS



Keep pressed for 2 seconds to display:

- Type of instrument
- Firmware version
- Serial number
- RS485 address

MEASURE LIST TABLE

(The parameters available vary according to instrument configuration)

U		I		P/PF		CNT		Long keypress	
Short keypress	U	Short keypress	I	Short keypress	P	Short keypress		Ea + MAIN	t LIFE
	U Min		I Max		P Σ			Ea - MAIN	t MAIN
	U Max		I AVG		P Avg Imp			Ea Phase	t P1
					P Avg Exp			Ea + Phase	t P2
					P MD Imp			Ea - Phase	t P3
					P MD Exp			Ea + P1	
								Ea - P1	
								Ea + P2	
								Ea - P2	
								Ea + P3	
								Ea - P3	

LEGEND OF PARAMETERS AND SYMBOLS

U	Voltage	L-N	Phase - Neutral reference
I	Current	L-L	Phase - Phase reference
P	Active Power	THD	Total Harmonic Distortion
Q	Reactive Power	Min	Minimum values (10 cycles time base)
S	Apparent Power	Max	Maximum values (10 cycles time base)
PF	Power Factor	Avg	Average value
Ea	Active Energy	MD	Maximum Demand
Er	Reactive Energy	Σ / MAIN	Value (total)
Es	Apparent Energy	P	Value (partial)
L	Inductive	t	Time counting
C	Capacitive	LIFE	Operating time
Imp / +	Imported value		
Exp / -	Exported value		

MECHANICAL CHARACTERISTICS	
Case	Self-extinguishing plastic material class V0
Protection degree	IP40 on front panel, IP20 terminals side
Size	105 x 90 x 58 mm (6 DIN modules)
VOLTAGE INPUT	
Direct insertion	Up to 300 V
	max. 360 V
Aux. power supply	85+265Vac +/- 10% 50/60Hz
Self consumption:	< 2,5VA

MODELS

PFN66-H0509-110, PFN66-H0509-A10, PFN66-H0W09-110, PFN66-H0709-0M0

DEVICE SETUP					
DESCRIPTION OF KEYS					
	Short keypress	Long keypress		Short keypress	Long keypress
	Confirm parameter	Setup confirmation		Go to previous value	Go to previous page
	Modify parameter			Go to next value	Go to next page
	Modify parameter			Exit without saving the configuration	

ENTER THE SETUP		EXIT THE SETUP	
Push for 2 seconds		Push for 2 seconds	
Using the keys or select SET from the menu	ELECTREX PAGE XXXX D6 ADDR 247 STAT VER X.XX SET SN XXXXXX RESET MAC XXXXXXXXXXXX MEAS		
Push the key			

SETUP SEQUENCE

PAGE	PARAMETERS	VALUES AVAILABLE	DEFAULT
PASSWORD			
	PASSWORD	0000 ... 9999	0000
MEAS-A Note n.1			
MEAS-A NET 3P-4W / EXP CT 10000 / 500 VT 020000 / 5	NET	3PH-4W, 2PH-2W, 1PH-2W, 3PH-3W-2C	3PH-4W
	EXPORT	IMP / EXP	EXP
	CT	10000 / 500	500/500
	VT	400000/300	1/1
MEAS-B Note n.2			
MEAS-B I AVG 8 P AVG 15	I AVG	1...60 (minutes)	8
	P AVG	1...60 (minutes)	15
RS485-A Note n.3			
RS485-A MODE SLAVE TOUT 03000 RETR 3	MODE	SLAVE, MASTER	SLAVE
	TOUT	100...10000 (ms)	3000
	RETR	0...9	3
RS485-B			
RS485-B ADDR 247 COM1 38400 / 8 COM2 N / 2 ST 0150	ADDR (485 address)	1 ... 247	247
	COM1 (Baud rate)	2400, 4800, 9600, 19200, 38400	38400
	COM1 (Data Bit)	7 or 8	8
	COM2 (Parity)	N = no parity, E = even parity, O = odd parity	N
	COM (Stop bit)	1 or 2	2
	S.T. (Silent Time)	0 ... 1000 mS (Step of 10)	100
ETH Note n.4			
ETH DHCP N IP 192.168.027.001 NETM 255.255.255.000 GWAY 127.000.000.001	DHCP	N, Y	N
	IP	xxx.xxx.xxx.xxx	192.168.027.001
	NETM	xxx.xxx.xxx.xxx	255.255.255.000
	GWAY	xxx.xxx.xxx.xxx	127.000.000.001
WIFI Note n.4			
WIFI DHCP N IP 192.168.026.001 NETM 255.255.255.000 GWAY 127.000.000.001	DHCP	N, Y	N
	IP	xxx.xxx.xxx.xxx	192.168.026.001
	NETM	xxx.xxx.xxx.xxx	255.255.255.000
	GWAY	xxx.xxx.xxx.xxx	127.000.000.001
NET Note n.5			
NET DEF ETH ETH Y WIFI Y	DEF	ETH, WIFI	ETH
	ETH	N, Y	Y
	WIFI	N, Y	Y
LCD Note n.6			
LCD DIM DISABLE TIME 3 LIGHT 50 PULSE ENABLE	DIM	DISABLE, ENABLE	DISABLE
	TIME	1...90 (sec)	3
	LIGHT	300...1000	500
	PULSE	DISABLE, ENABLE	ENABLE
ALARM 1 / A Note n.7			
ALARM 1-A MODE NORMAL TYPE MAX MEAS 000 THRE +000.000	MODE	NORMAL, 1-OF-3, 3-OF-3, UNBAL%, DERIV, UNBAL	NORMAL
	TYPE	MIN, MAX	MAX
	MEAS (note n.5)	Controlled measure. See table n.1 for register selection	000
	THRE (note n.5)	Threshold value	+000.000
ALARM 1 / B Note n.8			
ALARM 1-B HYST 05 DEL 01 / S / 01 / S AVG 05 OUT NORMAL	HYST	0...99 (%)	05
	DEL	0...99 / S,M / 0...99 / S,M	01 / S / 01 / S
	AVG	0...99 (sec)	05
	OUT	NORMAL, PULSE-S, PULSE-L, HOLD	NORMAL
ALARM 2 / A (see ALARM 1/A)			
ALARM 2 / B (see ALARM 1/B)			
ALARM 3 / A (see ALARM 1/A)			

ALARM 3 / B (see ALARM 1/B)			
ALARM 4 / A (see ALARM 1/A)			
ALARM 4 / B (see ALARM 1/B)			
CHANGE PWD			
	PWD	0000...9999	0000

STAT

The “STAT” page shows the assigned IP address of the LAN and WI-FI port (if present)


ELECTREX	HARM
KILO D6 ADDR 247	PAGE
VER X.XX	STAT
SN XXXXXX	SET
MAC XXXXXXXXXXXX	RESET

ETH
ETH 192.168.027.001
WIFI 192.168.026.001

NOTE n.1		
NET	3PH-3W-2CT	2 phases 3 wires, Triangle
	3PH-4W	3 phases 4 wires, Star
	2PH-2W	2 phases 2 wires, Bi-phase
	1PH-2W	1 phase, 2 wires, Single phase
	3I	3 phases
CT	Primary / Secondary of the current transformer (CT)	
VT	Primary / Secondary of the voltage transformer (VT)	
NOTE n.2		
PAVG	Integration time for Power of the average value (AVG) and peak value (MD)	
I AVG	Integration time for Current of the average value (AVG) and peak value (MD)	
NOTE n.3		
MODE	SLAVE	RS485 port set as Slave of the network.
	MASTER	RS485 port set as Master of the network.
TOUT		Predetermined time in which a given operation must be terminated
RETR		Number of communication attempts on the RS485 port
NOTE n.4		
DHCP	Enable / Disable the search for a DHCP server in the network	
IP	IP address of the network interface	
NETM	Subnet mask: defines the belonging range of a host within an IP subnetwork	
GWAY	IP address of the gateway	
NOTE n.5		
DEF	Selects the default network interface to be used for the communication	
ETH	Enable / Disable the Ethernet (LAN) port	
WIFI	Enable / Disable the WIFI port	
NOTE n.6		
DIM	Enable / Disable dimming of the display	
TIME	Time in seconds after which the display luminosity is reduced. (With DIM enabled)	
LIGHT	Luminosity level of the display	
PULSE	Enable / Disable the flashing of the sine wave symbol  light near the Electrex logo.	
NOTE n.7		
MODE	NORMALE	Classic Alarm with reference to a fixed threshold or to maximum and minimum delay and applicable hysteresis. "AVG" parameter is not used.
	1-OF-3	Considers also the 2 following registers of the selected one in "MEAS". It operates on a fixed max or min threshold with delay and applicable hysteresis. If one of the three registers exceeds the threshold the alarm goes ON. "AVG" parameter is not used.
	3-OF-3	Considers also the 2 following registers of the selected one in "MEAS". It operates on a fixed max or min threshold with delay and applicable hysteresis. When all the three registers exceed the threshold the alarm goes ON. "AVG" parameter is not used.
	DERIV	"THRE" parameter becomes a % value, "AVG" parameter is used. The instant value applied to the alarm on "MEAS" is compared with its value mediated obtained on the basis of the time set on "AVG". When the instantaneous value combined alarm differs in more (setting "Max") or less (setting "MIN") from the average value (" AVG ") of the percentage set on "THRE" the alarm goes on. With delay and applicable hysteresis.
	UNBAL	Considers also the 2 following registers of the selected one in "MEAS". "THRE" parameter becomes a % value. Alarm goes on when one of the three register is different from the percentage set on "THRE" comply with the higher value of the three read register if "MAX" is set on "TYPE", or comply with the lower value of the three register if "MIN" is set on "TYPE" With delay and applicable hysteresis.
TYPE	MAX	Alarm setting in excess or in decrease compared with the predefined conditions. With the exception of "UNBAL and UNBAL%".
	MIN	
MEAS		Indicates which register (measure) the alarm is related to. See table N.1 Input Register.
THRE		Alarm threshold in absolute value, with the exception made for "DERIV" and "UNBAL" in which the value inserted becomes a percentage.
NOTE n.8		
HYST		Hysteresis, ie the cycle between alarm value and alarm return value. It is a particularly useful function to avoid unwanted oscillations and / or alarms. Example: Alarm on current set at 100 A Max with 5% hysteresis. The alarm is activated at 100 A and is deactivated at 95 A
DEL		Delay time (between 1 sec and 99 min) for activation. Delay time (between 1 sec and 99 min) for deactivation.
AVG		Parameter to be used in "DERIV" mode only. Moving window width (in secs) used to create a reference value with which to compare the instantaneous data
OUT	NORMAL	Alarm remains active during the duration of the event. It restores automatically.
	HOLD	Alarm remains active until the manual reset via Modbus.
	PULSE-L	Generates a 500ms impulse when the alarm goes on.
	PULSE-S	Generates a 100ms impulse when the alarm goes on.


VOLTAGE CONNECTION

Use cables with max cross-section of 2,5 mm² if stranded, 4 mm² if rigid and connect them to the terminals marked VOLTAGE INPUT on the instrument according to the applicable diagrams that follow.

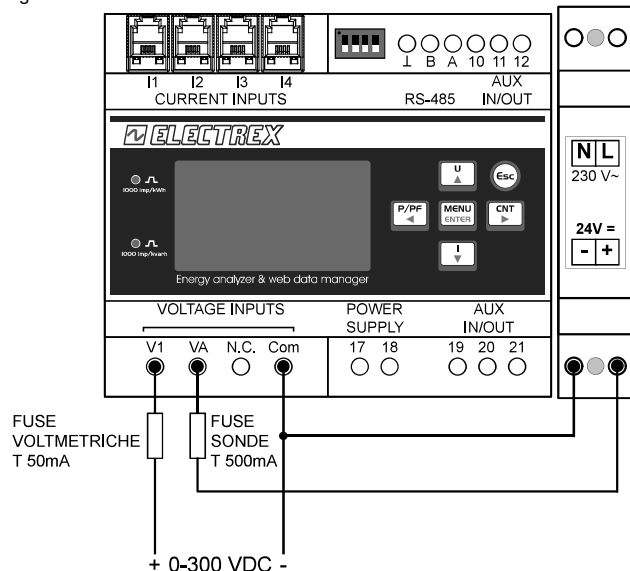

CURRENT CONNECTION

Use only the CTs supplied with the instrument. Connect the CTs to the terminals marked with I1, I2, I3, I4 (current input) according to the diagrams.

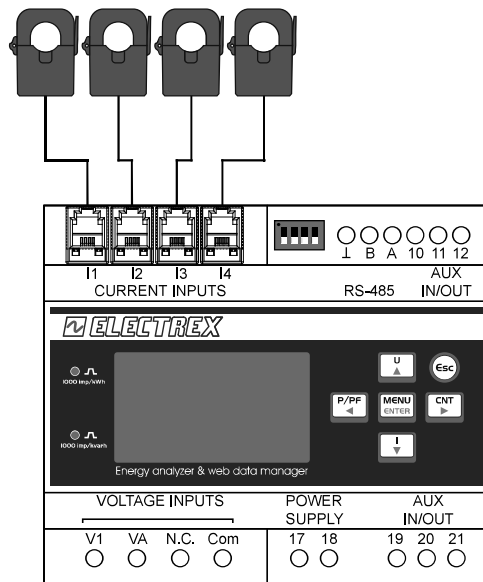

N.B. Failure to comply with the connection diagrams results in measurement errors. Do not extend the CT cables.

DIP-SWITCH CONFIGURATION

DIP	FUNCTION	SLAVE	MASTER *
1	Line termination resistance (120 Ohm)	OFF	ON
2	Fail safe resistance B (-)	OFF	ON
3	Fail safe resistance A (+)	OFF	ON
4	Not used	OFF	OFF

* with RS-485 Master PUK activated

LAN 10/100 ETHERNET PORT

	The instrument is equipped with a Ethernet Lan 10/100 Auto-MDI/MDIX port. For the connection can be used a data cable straight or crossover. Note: the port is not a PoE (Power over Ethernet = device power supply via the Lan port) type. The connection of the device to a PoE port is anyway accepted. The power supply anyway must be always provided by an external power supplier.
--	--

EXPBUS PORT

	The ExpBus port, configurable via Ethernet port on web pages: - uses a multicast communication rated at 250kb/sec with collision management - max cable length : 10 meters - manages up to 16 modules (but technically can manage up to 126) - uses the UTP cable, 4 wires used: 2 for the power supply at 9 Vdc 2 for the bidirectional communication The modules will also power supply the ExpBus port The cable must be connected in in-out modality (multidrop) as per the RS485 Bus.
--	--


MESSAGE "CFG ERROR"

During the set up operation a "CFG ERROR" message could appear. This means that some wrong parameters are typed.



POWER SUPPLY


The instrument is equipped with a separate power supply. The power supply terminals are numbered (17) and (18). Use cables with max cross-section of 2,5 mm² if stranded, 4 mm² if rigid.

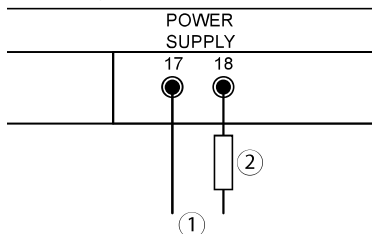

POWER SUPPLY

1	85/265Vac +/- 10% 50/60Hz
2	F: 500 mA T

SERIAL LINE CONNECTION

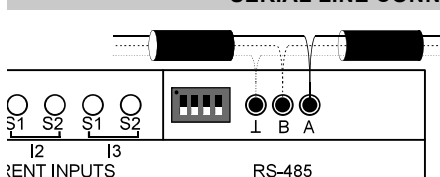

Max cable length: 1000 meters.

RS485	
Address	27
Baud rate	38400
Parity	None
Bit of Stop	2