

# 96 RS485 - RJ45 - (NET)

## INSTALLATION GUIDE

### COPYRIGHT

Electrex is a trademark of Akse S.r.l. All rights reserved.

It is forbidden to duplicate, adapt, transcript this document without Akse written authorization, except when regulated accordingly by the Copyright Laws.

### WARRANTY

This product is covered by a warranty against material and manufacturing defects for a 24 months period from the manufacturing date.

The warranty does not cover the defects that are due to:

- Negligent and improper use
- Failures caused by atmospheric hazards
- Acts of vandalism
- Wear out of materials
- Firmware upgrades

Akse reserves the right, at its discretion, to repair or substitute the faulty products

The warranty is not applicable to the products that will result defective in consequence of a negligent and improper use or an operating procedure not contemplated in this manual.

### RETURN AND REPAIR FORMALITIES

Akse accepts the return of instruments for repair only when authorized in advance. The transport costs are at customer charge.

### RE-SHIPING OF REPAIRED PRODUCT

The terms for re-shipment of repaired products are ex-works, i.e. the transport costs are at customer charge.

Products returned as defective but found to be perfectly working by our laboratories, will be charged a flat fee to account for checking and testing time irrespective of the warranty terms.

### SAFETY

This instrument was manufactured and tested in compliance with IEC 61010-1 CAT III - 300V class 2 standards for operating voltages up to 300 VAC rms phase to neutral.

In order to maintain this condition and to ensure safe operation, the user must comply with the indications and markings contained in the following instructions:

- When the instrument is received, before starting its installation, check that it is intact and no damage occurred during transport.
- Before mounting, ensure that the instrument operating voltages and the mains voltage are compatible then proceed with the installation.
- The instrument power supply needs no earth connection.
- The instrument is not equipped with a power supply fuse; a suitable external protection fuse must be foreseen by the contractor.
- Maintenance and/or repair must be carried out only by qualified, authorized personnel
- If there is ever the suspicion that safe operation is no longer possible, the instrument must be taken out of service and precautions taken against its accidental use.

Operation is no longer safe when:

- There is clearly visible damaged.
- The instrument no longer functions.
- After lengthy storage in unfavorable conditions.
- After serious damage occurred during transport

The instruments must be installed in respect of all the local regulations.

### OPERATOR SAFETY

**Warning:** Failure to observe the following instructions may lead to a serious danger of death.

- During normal operation dangerous voltages can occur on instrument terminals and on voltage and current transformers. Energized voltage and current transformers may generate lethal voltages. Follow carefully the standard safety precautions while carrying out any installation or service operation.
- The terminals of the instrument must not be accessible by the user after the installation. The user should only be allowed to access the instrument front panel where the display is located.
- Do not use the digital outputs for protection functions nor for power limitation functions. The instrument is suitable only for secondary protection functions.
- The instrument must be protected by a breaking device capable of interrupting both the power supply and the measurement terminals. It must be easily reachable by the operator and well identified as instrument cut-off device.
- The instrument and its connections must be carefully protected against short-circuit.

**Precautions:** Failure to respect the following instructions may irreversibly damage to the instrument.

- The outputs and the options operate at low voltage level; they cannot be powered by any unspecified external voltage.
- The application of currents not compatible with the current inputs levels will damage to the instrument.


Further documentation may be downloaded from our web site [www.electrex.it](http://www.electrex.it).

This document is owned by company AKSE that reserves all rights.

### DECLARATION OF CONFORMITY

Akse hereby declares that its range of products complies with the following directives EMC 2014/30/EU, 2014/35/EU and complies with the following product's standard CEI EN 61326 - Ed. 2.0 (2012) - IEC 61326 - Ed. 2.0 (2012) CEI EN 61010 Ed. 3 (2010) - IEC 61010 Ed. 3 (2010). The product has been tested in the typical wiring configuration and with peripherals conforming to the EMC directive and the LV directive.

### READINGS

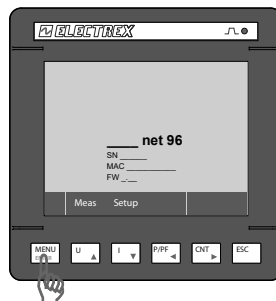

Keep pressed for 2 seconds to display:

- Type of instrument
- Firmware version
- Serial number
- RS485 address

### MEASURE LIST TABLE

(The parameters available vary according to instrument configuration)

U	I	P/PF		CNT				
ULN	I	P	PF	Ea + MAIN	Er + L MAIN	Es + MAIN	C1 MAIN	t MAIN
ULL	I $\Sigma$	P $\Sigma$	PF $\Sigma$	Ea - MAIN	Er - L MAIN	Es - MAIN	C2 MAIN	t P1
ULN THD	I THD	P AVG +		Ea + Fase	Er + C MAIN	Es + Fase	C3 MAIN	t P2
ULL THD	I MAX	P AVG -		Ea - Fase	Er - C MAIN	Es - Fase	C4 MAIN	t P3
ULN MIN	I AVG	P MD +		Ea + P1	Er + L Fase	Es + P1	C1 P1	t LIFE
ULL MIN	I MD	PMD -		Ea - P1	Er - L Fase	Es - P1	C2 P1	
ULN MAX	Q			Ea + P2	Er + C Fase	Es + P2	C3 P1	
ULL MAX	Q $\Sigma$			Ea - P2	Er - C Fase	Es - P2	C4 P1	
	Q AVG +			Ea + P3	Er + L P1	Es + P3	C1 P2	
	Q AVG -			Ea - P3	Er - L P1	Es - P3	C2 P2	
	Q MD +				Er + C P1		C3 P2	
	Q MD -				Er - C P1		C4 P2	
	S				Er + L P2		C1 P3	
	S $\Sigma$				Er - L P2		C2 P3	
	S AVG +				Er + C P2		C3 P3	
	S AVG -				Er - C P2		C4 P3	
	S MD +				Er + L P3			
	S MD -				Er - L P3			
					Er + C P3			
					Er - C P3			

### MEASURE SELECTION

MENU ENTER	Push the MENU/ENTER key
< U I P PF CNT	Select the measure group
< Bot- Bot+ Pag- Pag+	Select the display positioning Pag: upper / main part of the display Bot: bottom of display

### MAIN / UPPER PART OF THE DISPLAY (PAG- AND PAG+ KEYS)

See list of measures in the table above

### BOTTOM PART OF THE DISPLAY (BOT- AND BOT+ KEYS)

ULN	ULL	F	I $\Sigma$	In	P $\Sigma$	Q $\Sigma$	S $\Sigma$	PF $\Sigma$
Ea + MAIN	Ea - MAIN	Es + MAIN	Es - MAIN	Er + L MAIN	Er - L MAIN	Er + C MAIN	Er - C MAIN	

### LEGEND OF PARAMETERS AND SYMBOLS

U	Voltage	THD	Total Harmonic Distortion
LN	Phase Neutral	AVG	Average (rolling) value
LL	Phase Phase	MD	Maximum Demand
I	Current	MIN	Minimum values (10 cycles time base)
In	Neutral current	MAX	Maximum values (10 cycles time base)
P	Active Power	+	Imported value
Q	Reactive Power	-	Exported value
S	Apparent Power	Er L	Inductive
PF	Power Factor	Er C	Capacitive
F	Frequency	t	Time counter
Ea	Active Energy	C	Pulse count
Er	Reactive Energy	MAIN	Total
Es	Apparent Energy	P1,P2,P3	Partial 1,2,3
		LIFE	Device lifetime

### MECHANICAL CHARACTERISTICS

Case	Self-extinguishing plastic material class V0
Protection degree	IP40 on front panel, IP20 terminals side
Size	96 x 96 x 72 mm

### VOLTAGE INPUT

Direct insertion	Up to 300 Vrms phase-neutral or 520 Vrms phase to phase
With external VT:	Primary: programmable (max. 400 kV) Secondary: programmable (max. 300 V)
	Overload: 900 Vrms phase to phase for 1 sec
Aux. power supply	85/265Vac +/- 10% 50/60Hz
Self consumption:	< 2,5VA

### MODELLS

PFNK9-1Q5Q9-122 PFNE9-117Q9-0M0, PFNE9-115Q9-110, PFNE9-115Q9-150.  
PFNE9-111Q9-000, PFNK9-1H7Q9-0M0, PFNK9-1Q7Q9-0MM, PFNK9-1Q5Q9-121,  
PFNK9-1Q5Q9-A21, PFNK9-1Q5Q9-F21, PFNK9-1QWQ9-121, PFNK9-1QAQ9-121,  
PFNK9-1Q5Q9-161, PFNK9-1Q5Q9-131, PFNE9-117Q9-0M0B, PFNE9-1H7Q9-0M0B,  
PFNK9-111Q9-000, PFNK9-1Q5Q9-122, PFNK9-1Q5Q9-A21B, PFNK9-1Q7Q9-122,  
PFNK9-1QAQ9-521, PKA0220-00, PKA0510-00, PKA0520-00

DEVICE SETUP

DESCRIPTION OF KEYS ON THE DISPLAY

	<	Down	Up			Ent	
<	Return to the previous level						
Down	Scroll down						
Up	Scroll upwards						
Ent	Confirm the choice made						
	<	-	+	Left	Right	Sav	
<	Return to the previous level						
-	Decrease the digit or change selection						
+	Increase the digit or change the selection						
Left	Move selection to the left						
Right	Move selection to the right						
Sav	Save						

ENTER THE SETUP MENU

Press Menü/Enter key twice	
<div><div>MENU ENTER</div><div>U ▲</div><div>I ▼</div><div>P/PF ◀</div><div>CNT ▶</div><div>ESC</div></div>	
Press the key corresponding to the Setup menu voice	
	<div><div></div><div>Meas</div><div>Setup</div><div></div><div></div></div>
Meas	to go back to the measurement page
Setup	to enter the instrument setup
SETUP main page	
	<div><div>SETUP - COM B</div><div>SETUP - ETHERNET</div><div>SETUP - MEAS A</div><div>SETUP - MEAS B</div><div>SETUP - COM A</div></div>

SETUP SEQUENCE

PAGE	PARAMETERS	VALUES AVAILABLE	DEFAULT
SETUP - ETHERNET			
	DHCP	ENABLE, DISABLED	DISABLED
	IP ADDR	xxx.xxx.xxx.xxx	192.168.27.1
	NET MASK	xxx.xxx.xxx.xxx	255.255.255.0
	GATEWAY	xxx.xxx.xxx.xxx	127.0.0.1
NET MASK 255.255.255.0			
GATEWAY 127.0.0.1			
DHCP DISABLED			
IP ADDR 192.168.27.1			
SETUP - MEAS A			
	NET	3PH-4W, 2PH-2W, 1PH-2W, 3PH-3W, 3I	3P-4W
	EXP	ENABLE, DISABLED	ENABLE
EXP ENABLED			
NET 3P-4W			
SETUP - MEAS B			
	VTP	1...400000	1
	VTS	1...300	1
	CTP	1...10000	5
	CTS	1...5	5
VTP 1			
VTS 1			
CTP 5			
CTS 5			
SETUP - COM A			
	MODE	SLAVE, MASTER	MASTER
	TIMEOUT	100...10000 (ms)	3000
	RETRIES	0...9	3
TIMEOUT 3000			
RETRIES 3			
MODE MASTER			


SETUP - COM B			
	ADDR	1 ... 247	247
	BAUD RATE	2400, 4800, 9600, 19200, 38400	38400
	DATA	5...8	8
	PARITY	N = no parity, E = even parity, O = odd parity	N
	STOP BITS	1 or 2	2
	SILENT TIME	0...5000 (ms)	150
		STOP BITS	2
		SILENT TIME	150
		ADDR	247
		BAUD RATE	38400
		DATA	8

<b>NOTE n.</b>		
DHCP	Enable / Disable the search for a DHCP server in the network	
IP ADDR	IP address of the network interface	
NET MASK	Subnet mask: defines the belonging range of a host within an IP subnetwork	
GATEWAY	IP address of the gateway	
<b>NOTE n.</b>		
NET	3PH-3W	2 phases 3 wires, Triangle
	3PH-4W	3 phases 4 wires, Star
	2PH-2W	2 phases 2 wires, Bi-phase
	1PH-2W	1 phase, 2 wires, Single phase
	3I	
EXP	ENABLE, DISABLED	If enabled, it considers the current direction
<b>NOTE n.</b>		
VTP	Primary of the voltage transformer (VT)	
VTS	Secondary of the voltage transformer (VT)	
CTP	Primary of the current transformer (CT)	
CTS	Secondary of the current transformer (CT)	
<b>NOTE n.</b>		
MODE	Changing this parameter also requires changing the dip-switches	

INPUTS - OUTPUTS					
OUTPUTS			INPUTS		
10	C	Common (negative)	19	C	Common (negative)
11	O1	Output 1 (positive)	20	I2	Input 2
12	O2	Output 2 (positive)	21	I1	Input 1


OUTPUTS		INPUTS	
Maximum applicable voltage:	27 Vdc	Supply voltage (external):	da 10 a 30 Vdc
Maximum switchable current:	27mA	Current consumption:	da 2 a 10mA
		Max. count frequency	10 o 100Hz
N.B. Transistor optocoupler digital outputs (NPN) according to DIN 43864.		N.B. For gas meters a galvanic separation is needed per ATEX standards	

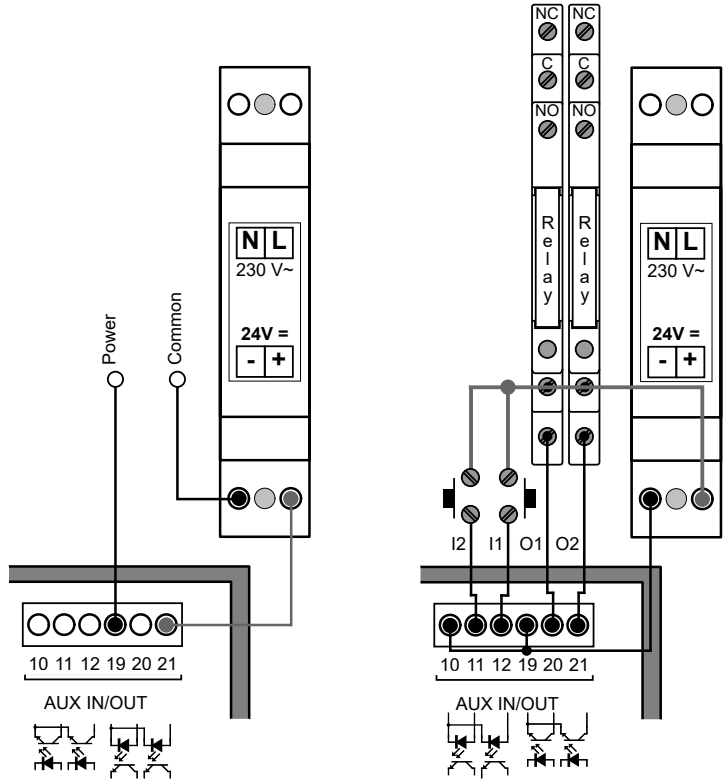


## VOLTAGE CONNECTION

Use cables with max cross-section of 2,5 mm<sup>2</sup> if stranded, 4 mm<sup>2</sup> if rigid and connect them to the clamps marked VOLTAGE INPUT on the instrument according to the applicable diagrams that follow.


### 1P2W

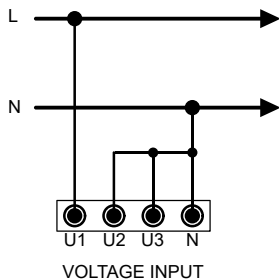


### 3I

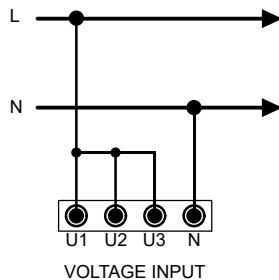


### 3P4W / 3I

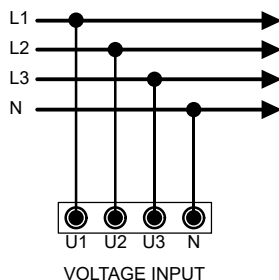

### 2P2W

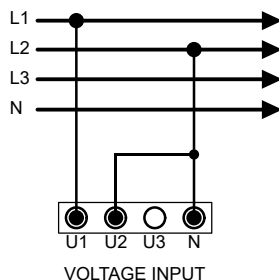

### 3P3W

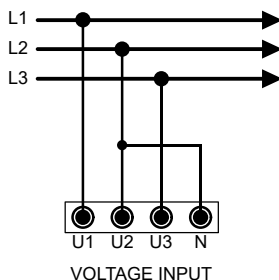

## DIP-SWITCH CONFIGURATION

DIP	FUNCTION	SLAVE	MASTER *
1	Line termination resistance (120 Ohm)	OFF	ON
2	Fail safe resistance B (-)	OFF	ON
3	Fail safe resistance A (+)	OFF	ON
4	Not used	OFF	OFF

\* with RS-485 Master PUK activated

## PORTA LAN 10/100 ETHERNET

 


ETHERNET

The instrument is equipped with a Ethernet Lan 10/100 Auto-MDI/MDIX port. For the connection can be used a data cable straight or crossover.

Note: the port is not a PoE (Power over Ethernet = device power supply via the Lan port) type. The connection of the device to a PoE port is anyway accepted. The power supply anyway must be always provided by an external power supplier.

## EXPBUS PORT



The ExpBus port, configurable via Ethernet port on web pages:


- uses a multicast communication rated at 250kb/sec with collision management
- max cable length : 10 meters
- manages up to 16 modules (but technically can manage up to 126)
- uses the UTP cable, 4 wires used:
  - 2 for the power supply at 9 Vdc
  - 2 for the bidirectional communication

The modules will also power supply the ExpBus port  
The cable must be connected in in-out modality (multidrop) as per the RS485 Bus.


## CURRENT CONNECTION

Connect the CT outputs to the terminals marked I1, I2, I3 (CURRENT INPUT) of the instrument according to the applicable diagrams that follow.


### 1P2W / 2P2W

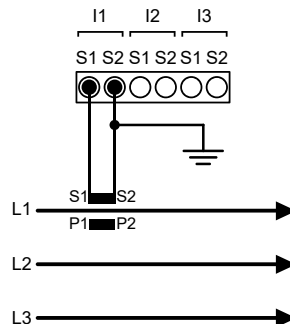

### 3P3W

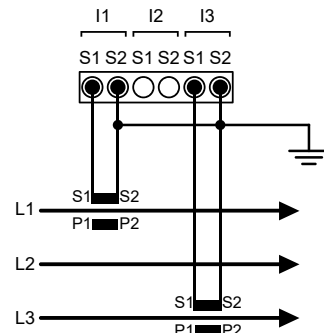


### 3P3W / 3P4W / 3I

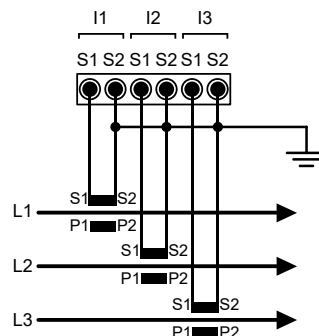

**Note:** Scrupulously respect the matching of phase between the voltage signals and current signals. Failure to comply with this correspondence and connection diagrams gives rise to measurement errors.


## POWER SUPPLY

The instrument is equipped with a separate power supply. The power supply terminals are numbered (17) and (18). Use cables with max cross-section of 2,5 mm<sup>2</sup> if stranded, 4 mm<sup>2</sup> if rigid.

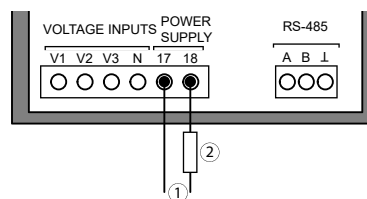

POWER SUPPLY	
1	85/265Vac +/- 10% 50/60Hz
2	F: 500 mA T

## SERIAL LINE CONNECTION

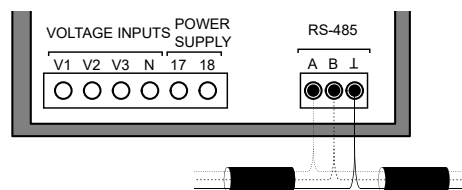

RS485	
Address	27
Baud rate	38400
Parity	None
Bit of Stop	2

Max cable length: 1000 meters.